


# roman blinds

## measuring instructions


For accurate measurements please use a metal tape measure, and take measurements in centimetres, to the nearest 0.1cm.

- All of our blinds can be fixed into the face of the window frame or wall, or into the top of the lintel - allowing you total control of the depth your blind can be positioned in the depth of your window recess.
- Choose whether you want the blinds to hang inside or outside the window recess.
- Please check for the proximity of adjacent walls, furniture, window handles etc. when measuring for your blinds.

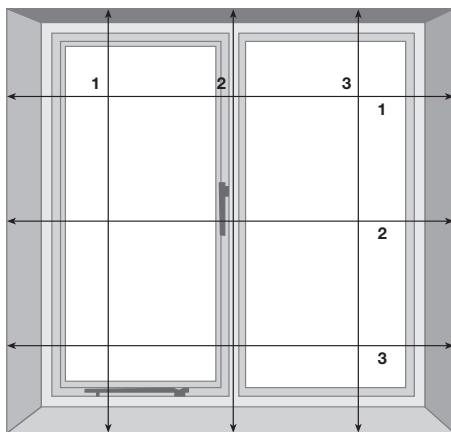

**Recess**

**For blinds to hang inside the window recess:**  
Measure the drop by taking the measurement from the top of the recess to the window sill, in three places as shown. Measure the width of the window recess from wall to wall, in three places as shown. Take the smallest measurement. We will make all adjustments to ensure your blinds fit perfectly.

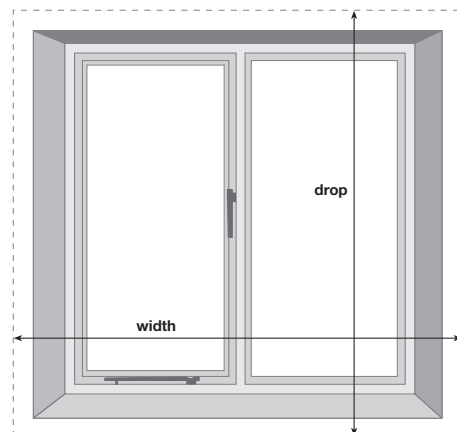

**Exact**

**For blinds to hang outside the window recess:**  
Measure the exact area you would like the blind to cover as shown.

## aftercare

Look after your blinds by following the straightforward operating instructions below.

### Operating Instructions

- Pull the cords to raise the blind to the desired level.
- Then tie the cord around the cleat.

### Cleaning

- The fabric can be removed from the headrail and the rods removed, but should be dry cleaned with care only. (P)
- Soft fabric will shrink - if any of the fibre rods become visible trim off to the desired length with an appropriate tool.
- As an alternative to dry cleaning, the blind can be cleaned using the upholstery tool on your vacuum cleaner.

Your local supplier:

Tel. 01423 871617  
[www.blinds-factorydirect.co.uk](http://www.blinds-factorydirect.co.uk)


NB: The manufacturer will not accept responsibility for damage to blinds caused by misuse. Fitting items may vary depending upon type of fitting requested.

# roman blinds


## fitting instructions

### fittings

- 1** Brackets:  
quantity to suit  
length of blind

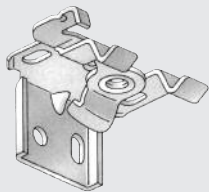


- 2** Cleat &  
2 screws

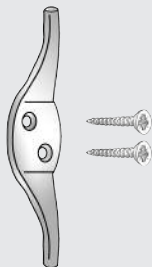


- 3** Wood screws:  
min 4



- 4** Screws: min 4  
Rawl plugs:  
min 4



- 5** Blind: 1

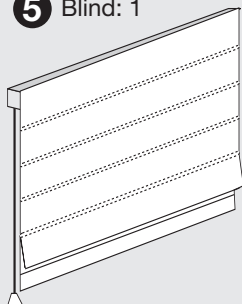


### Outside Recess

If fitting the blind outside the window, measurements **(C)** will need to be the same. To work out **(C)**, simply minus **(B)** from **(A)** and divide the answer by two. Follow instructions for FACE FIXING

### Inside recess

Decide whether to FACE or TOP FIX. FACE FIX to fit the bracket to the window frame. TOP FIX to the lintel if the window frame is uPVC, or if there are any obstructions, e.g. window handles.

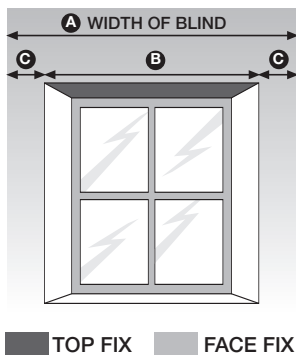

### step one


Place blind in fitting position. Space the brackets evenly.



### step two


### Top Fixing

Measure the distance that any handles protrude from the frame, **A**. Mark this measurement on the lintel and use it to position the back of the bracket. Mark the position of holes **B** and screw bracket to lintel using screws and rawl plugs supplied.

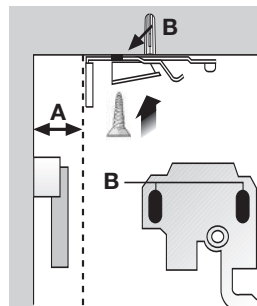


### Face Fixing

Position bracket with swing arm facing towards you, and mark holes **B**. Screw bracket in place. Use rawl plugs if fitting to the wall.




### step three

Push swing arm anti-clockwise as far as it will go. Now clip the blind over the bracket, first easing the front lip of the headrail **A** in to place.

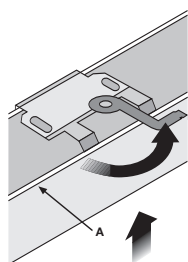


Push swing arm clockwise until it locks in to place, firmly holding the blind headrail.

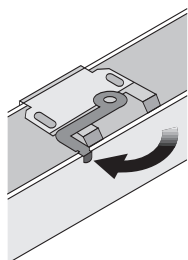

### step four


Fix the cleat to the frame or wall in an easy-access position. Screw cleat into place using the screws supplied.

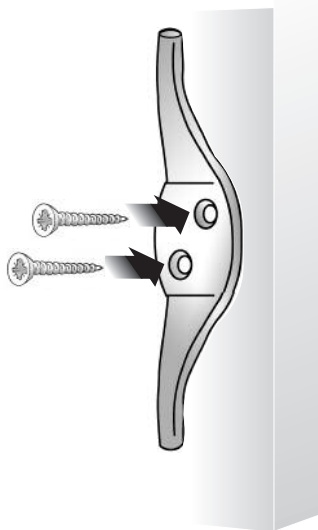

### step five

The fabric of the Roman blind attaches to the headrail with Velcro.

Pull side cords to open the blind, and tie them to the cleat to keep the blind raised.

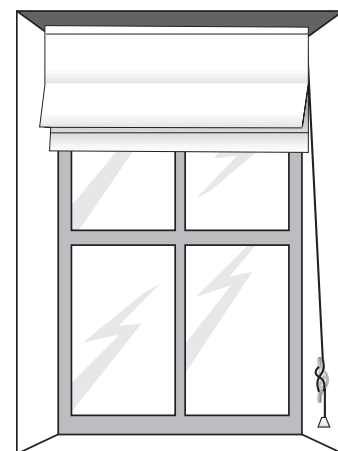

### step six

### WARNING

IN THE INTEREST OF SAFETY, IT IS ADVISABLE TO KEEP ALL PULL CORDS AND CHAIN/BEAD CORDS OUT OF THE REACH OF CHILDREN.